



The GET IT Program

Quality Products When You Need Them





The GET IT Program

Provides quick access to the most commonly used safety items—quality products from top suppliers—in stock, ready for delivery.

- Reduces your administrative burden, creating greater overall value
- Reduces downtime created by backorders
- Streamlines your purchasing process

You GET IT because we GOT IT.

Table of Contents

Apparel.....	2	Foot Protection.....	7
Cleanroom.....	2-4	Hand Protection.....	7-10
Ergonomics.....	4	Head Protection.....	10
Eye Protection.....	4-5	Hearing Protection.....	10-11
Fall Protection.....	5-6	Lockout/Tagout.....	11
Fire Fighting Products.....	6	Respiratory Protection.....	11-13
First Aid.....	6	Spill Control.....	13
Flashlights.....	6		

APPAREL



DuPont™ NexGen® Protective Coveralls

Lightweight coveralls provide excellent barrier protection against nontoxic particle, liquid, and spray hazards. True aerosol- and liquid-proof microporous barrier demonstrates >99% holdout of particles down to 0.35µm. Breathable, cloth-like material is treated to provide antistatic properties for use in controlled environments. Low linting for use in critical applications. White. Case of 25.

CAT. NOS. 190882138 through -42
(Open wrists and ankles, M-3XL)

CAT. NOS. 190882158 through -63
(Attached hood, elastic wrists, S-3XL)

CAT. NOS. 190882144 through -49
(Hood and boots, elastic wrists, S-3XL)



DuPont™ Tyvek® Coveralls

Provide excellent protection against microscopic airborne particles as well as limited splash protection. Lightweight, chemically and biologically inert, and tear resistant. Economical enough to discard after wearing, yet strong enough to withstand several wearings. Case of 25. **Note:** Keep all garments away from heat and flames: material is not flame retardant and will melt at 135°C (275°F).

CAT. NOS. 013611A through -G
(Open wrists and ankles, S-4XL)

CAT. NOS. 013617B through -F
(Attached hood, elastic wrists, M-3XL)

CAT. NOS. 013612B through -F
(Hood and boots, elastic wrists, M-3XL)



Fisherbrand® PVC Rainwear

Yellow 0.35mm PVC on three-piece, polyester rainsuit. Abrasion- and tear-resistant. One-piece jacket with front snap closure has inside storm fly, two flap pockets, raglan sleeves with double-sealed seams, detachable hood, and take-up snaps at each wrist. Bib-style overalls have front snap fly, two PVC buttons at front, adjustable suspenders, and take-up snaps at waist and ankle.

CAT. NOS. 19063158 through -62 (M to XXL)



Neese® Three-Piece Economy Rainsuit

Made of heavyweight 35mm vinyl on polyester with heat-sealed seams. Includes jacket with two covered pockets, detachable hood, and bib-style trousers.

CAT. NOS. 19168350B through -I (M to 5XL)



Sperian® Fiber Sleeve with Kevlar®

100% Kevlar brand fiber. Tubular knit. "No-Slip" top prevents sleeve from rolling down by applying a slight, nonconstricting compression on the upper arm. Standard weight, without thumb hole. Length: 14".

CAT. NO. 19999377

CLEANROOM



Fisherbrand® Latex-Free Polypropylene Bouffant Caps

Made of 100% spunbonded polypropylene, these lightweight, nonlinting caps feature a synthetic, nonlatex band stitched in with soft floss for a comfortable, secure fit. Disposable. Double polybagged; flat packed for easy storage. Pack of 100.

CAT. NOS. 19098913 (21") and 19098914 (24")



Fisherbrand® Polypropylene Beard Covers

Excellent in food preparation and industries where body contaminants are a concern. Cool, nonflammable, nonparticulating polypropylene beard covers feature comfortable elastic seams. Latex-free. Regular size. White. Pack of 100.

CAT. NO. 19098917



Fisherbrand® Facemasks

Thin middle layer of meltblown polypropylene filter media lies between spunbonded polypropylene inner and outer layers ultrasonically welded to reduce particle generation. Bacterial filtration efficiency is 99%. With polyurethane ear loops. Case of 500.

CAT. NO. 18960B



Kimberly-Clark® CR Classic® Sterile Facemasks

Low-linting apertured polyethylene film outer layer provides protection from contamination. Excellent bacterial and particle filtration combined with good breathability. Gamma sterilized and individually bagged. Case of 200.

CAT. NO. 189994779 (Knitted earloops)
CAT. NO. 189992405 (Soft ties)



Kimberly-Clark® GPM Masks

Double-layer gross particulate masks with knitted earloops trap large facially generated particles while offering superior breathability. Outer layer is polypropylene. Interfacing is BiCoSof™ bicomponent polymer of polypropylene and polyethylene. Pleat style. White. Nonsterile. Packaged 50 masks to a double bag/10 bags to a case.

CAT. NO. 189994781



Cardinal Health Micro-Clean® 2-1-2 Hoods

Breathable Tyvek™ hoods filter 75% of particles. With adjustable ties. Universal size. Sterile. Open face. Case of 175.

CAT. NO. 191202937



Cardinal Health Insta-Gard® Earloop Mask with Eye Shield

Includes a contoured nose cutout to help exhaled breath escape unobstructed through the mask. Eyeshield is treated with an anti-fogging agent. Downward folded pleats. Sonically sealed edges. Fully enclosed nosepiece. Case of 100.

CAT. NO. 191201281

CLEANROOM (CONTINUED)



DuPont™ Gripper™ Cleanroom Shoe Covers

Durable, splash-resistant, low-linting DuPont Tyvek® shoe covers clean processed in an ISO Class 4 (Class 10) cleanroom. White with elastic closures and PVC soles with a coarsely textured interior for secure grip. ISO Class 5 (Class 100) compatible. Packaged in individual anti-static bags. Case of 50.

CAT. NO. 19062298



DuPont™ SureStep™ Shoe Covers

Tear-resistant and durable. Unique monofilament coating provides exceptional skid resistance. Will not delaminate, which makes covers practically lint-free. Resistant to liquids. Seamless. White. X-Large size. Case of 100 pairs.

CAT. NO. 190882235



Cardinal Health Sterile Micro-Clean® High Top Shoe Covers

Provide excellent barrier and splash protection and sterility assurance to 10⁻⁶. Sterilized by cobalt 60 irradiation. With durable, skid-resistant PVC soles. Not clean processed. 18" high. Case of 300.

CAT. NOS. 191202939B through -E (S to XXL)



Fisherbrand® Antistatic Polyethylene Shoe Covers

Offer exceptional durability. High-strength polyethylene for longer wear. Fluid impervious. Skid resistant for added safety. Seamless bottom. Case of 150.

CAT. NOS. 191300080 (Regular) and 19098933 (X-Large)



Essential Solutions® SafeStep® Shoe Covers

Ultralow particle count. Remarkable anti-skid properties inherent in material. Seamless sole with serged seams. Case of 400.

CAT. NOS. 19165507 through -09 (Universal, XL, 2XL)



Essential Solutions® Explorer Shoe Covers

Seamless sole maximizes comfort and prevents migration of contamination. Fluid impervious. Excellent antiskid properties in wet or dry conditions. Case of 300.

CAT. NOS. 19165510 through -12 (Universal, XL, 2XL)



DuPont™ Suprel® LS Coveralls

Patented Suprel LS bi-component fabric offers breathability and barrier protection combined with soft feel and optimal comfort. Elastic wrists and ankles with laydown collar. Case of 25.

CAT. NOS. 19165207 through -13 (S to 4XL)



Cardinal Health Sterile Micro-Clean® Coveralls

Single-use coveralls made from clean-processed Tyvek™, provide cloth-like aesthetics with excellent particulate protection to 0.5µ. Bound seams and tunnelized elastic. Sterility Assurance Level (SAL), 10⁻⁶. Individually packaged. Fully traceable.

CAT. NOS. 191202940B and -C (M and L, 30/Cs.)
CAT. NOS. 191202940D and -E (XL and XXL, 25/Cs.)
CAT. NO. 191202940F (XXL, 29/Cs)



Cardinal Health Astound® Nonsterile Gowns

Offer maximum coverage with comfort. Gowns are made from cellulose/polyester blend fabric with raglan sleeves and soft polyester cuffs. Extra-wide back flap. Below-the-knee length. For industrial use only. Case of 25.

CAT. NOS. 19147761 and 191203172 (L and XL)



ITW Texwipe® Micro-Absorbond® Swabs

Perfect for abrasion-sensitive applications requiring very low residue such as wiping sensitive-coated optics surfaces. Long filaments reduce risk of fiber release; hydroentanglement lowers nonviable residue to a very low level. Excellent chemical resistance; can be used with a wide range of solvents. Tip diameter: 0.126" (3.2mm). Handle length: 2.362" (6.0cm). Pack of 500.

CAT. NO. 18384



ITW Texwipe® Alpha® Polyester Series Swabs

Economical 100% continuous filament polyester heat-molded onto polypropylene handles without contaminating adhesives. Flexible, cleanroom-laundered knitted heads. Outstanding chemical resistance; use with cleaning solvents and solutions. Long handle style has flexible paddle. Tip diameter: 0.268" (6.8mm). Handle length: 5.728" (14.6cm). Pack of 100.


CAT. NO. 18385



ITW Texwipe® Foam Series Swabs

High performance for applications requiring sorbency, low particle generation and solvent resistance. Softness and low abrasion protect delicate components. Flexible foam head on a chemical-resistant polypropylene handle. Tip diameter: 0.188" (4.8mm). Handle length: 3.661" (9.3cm). Pack of 100.

CAT. NO. 18361

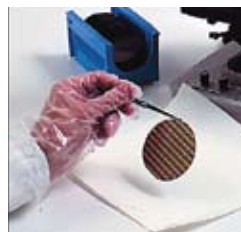

ITW Texwipe® TechniCloth® Blended Wipers

Economical all-purpose nonwoven wipers combine the absorbency of natural fiber (55% cellulose) with the cleanliness and strength of synthetic fiber (45% polyester). Offer superior wet and dry strength, solvent compatibility, and acid resistance. Will not scratch or abrade delicate precision components. Hydroentanglement process eliminates need for chemical binders. 9 x 9". Pack of 300.

CAT. NO. 18315C

CLEANROOM (CONTINUED)



ITW Texwipe® Vectra® Premium Polyester Wipers

Premium wipers are ideal for wiping tools and equipment, cleaning work surfaces, transporting parts, or as work surfaces. 100% single-ply, double-knit polyester construction. Soft, non-abrasive surface with thermally sealed border on all four edges. High absorbency with ultralow levels of particles, ions, and extractables. Can be used with deionized water, isopropyl alcohol, or other solvents. 9 x 9". Pack of 100.

CAT. NO. 19121079



ITW Texwipe® Vectra® Alpha® 10 Sealed-Border Wipers

Ideal for wiping and spill control in critical, ultra-clean environments. All four edges are thermally sealed to prevent release of fiber and particulate. Double-knit construction of 100% continuous filament polyester. Resist abrasion with rigorous use or when wiping rough surfaces. 9 x 9". Pack of 100.

CAT. NO. 18323A

ERGONOMICS



Ergodyne® ProFlex® 100 Back Support

Economical option with essential lower back and abdominal support. Rubber-tracked webbing keeps support in place for comfortable wear. Spandex® body cloth for breathable comfort. Adjustable two-stage closure. Elastic suspenders. Machine washable. Black.

CAT. NO. 19035264C (Small)

CAT. NO. 19035264D (Medium)

CAT. NO. 19035264F (Large)



Ergodyne® ProFlex® Hard-Cap Knee Pad

Perfect for tough jobs but soft enough for delicate work surfaces. Longer-cut cushions and contoured side cuts for maximum coverage with good range of knee motion. With adjustable elastic straps, neoprene foam padding, and a Cordura® outer shell. Universal size.

CAT. NO. 19035305 (Slip-resistant cap)

EYE PROTECTION



190421010 Shown

Fisherbrand® Racer® Series Eyewear

New eyewear series offers exceptional protection and style at an affordable price. Spectacles feature an 8-base curve, wrap-around design. Scratch-resistant polycarbonate lenses block >99.9% of harmful UV radiation. Wrap-around design offers superior side coverage. Lightweight frames are durable and comfortable. Spectacles meet all ANSI Z87-2003 requirements for optical quality and impact protection. Pack of 12.

CAT. NO. 190421000 (Qualifier, black frame with clear lens)

CAT. NO. 190421005 (Top Fuel, black frame with clear lens)

CAT. NO. 190421010 (Vortex, black frame with clear lens)

CAT. NO. 190421015 (Crew Chief, black frame with clear lens)



AOSafety® F6400 Malibu® Safety Spectacles

Lightweight metal frame features wrap-around styling and integral sideshields for a wide field of vision. Extended bridge protects lens when spectacles are not in use. Single-piece, impact-resistant polycarbonate lens has scratch-resistant coating and absorbs 99.9% UV radiation up to 380nm. Spectacles meet ANSI Z87.1-1989 standards.

CAT. NO. 18999568A (Gold tone frame with clear lens)



AOSafety® Virtua™ Eyewear

Lightweight, comfortable spectacles weigh less than 1 ounce. Sleek, 9.5 base lens wraps for superior protection and unobstructed view. Tough polycarbonate construction resists impact and 99.9% of UV rays. Universal nose bridge fits most profiles and prevents slippage. Contoured flexible temples ensure a comfortable fit. Meet ANSI Z87.1-2003 standards.

CAT. NO. 19121275 (Clear temples with clear hardcoat lens)

CAT. NO. 19121277 (Clear temples with clear antifog lens)

CAT. NO. 19121276 (Gray temples with gray hardcoat lens)

CAT. NO. 19121278 (Gray temples with gray antifog lens)



Fisherbrand® Contempo Spectacles

Feature a single polycarbonate lens with sideshields and browguard molded into a lightweight, wrap-around frame. Absorb >99.9% of harmful UV light and include a permanent antifog coating. Adjustable temple lengths with high-visibility lens. Meet ANSI Z87.1-2003 standards. Pack of 12.

CAT. NO. 191302092 (Black frame with clear lens)



Fisherbrand® 200 Series Spectacles

With adjustable spatula temples and molded-in sideshields and browguards. One-piece lens provides an unobstructed field of vision while absorbing >99.9% of harmful UV light. Meet ANSI Z87.1-1989 standards; CSA approved. Pack of 12.

CAT. NO. 191302088 (Black frame with clear lens)



uvex® genesis® Protective Spectacles

Dual nine-base wrap-around unilens allows undiminished peripheral vision with exceptional eye protection. Meets stringent military V₀ ballistic impact requirements and blocks >99.9% of harmful UV light. Nose bridge is covered with ultrasoft "fingers" for improved fit. With three-position lens inclination system and adjustable temples. Black frame, clear lens.

CAT. NO. 19040143 (ultradura® scratch-resistant coating)

CAT. NO. 19040144 (uvextreme® AF antiscratch/antifog coating)



Fisherbrand® Visitorspec™ Spectacles

100% impact-resistant polycarbonate wrap-around unilens design with blue temples. Clear lens absorbs >99.9% of harmful UV light. Meets ANSI Z87.1-2003 standards; CSA Z94.3-1999 approved. Pack of 12.

CAT. NO. 191302090

EYE PROTECTION (CONTINUED)



Jackson Safety® Spectacle Cord

Cord holds spectacles securely around neck and protects eyewear from damage or loss. Nonadjustable braided nylon. Black.

CAT. NO. 19035076



Chums® Eyewear Retainer

Sturdy adjustable cord helps to reduce loss or breakage. Slide bead holds spectacles securely to head, or can be loosened to allow passive retention. Cotton construction provides durable wear, eliminates irritation from prolonged use. Fits most spectacle frames. Black.

CAT. NO. 189992211



Fisherbrand® Chemical Splash and Impact Goggles

Built for comfortable protection with a soft, flexible PVC body that conforms to facial contours and a headstrap that easily adjusts for a custom fit. Large frames fit over most prescription eyewear. Coated, clear polycarbonate lens resists impact, scratching, and fogging. Goggles meet ANSI Z87.1 and CSA standards.

CAT. NO. 19181503 (Impact goggles)
CAT. NO. 19181504 (Chemical splash goggles)



Safety Choice™ Economy Goggles

Affordable goggles in impact and chemical splash styles. Soft, flexible PVC body molds to facial contours with adjustable headstrap for a comfortable fit. Clear polycarbonate lens resists impact.

CAT. NO. 19181501 (Impact goggles)
CAT. NO. 19181502 (Chemical splash goggles)



uvex® classic™ Chemical Splash Goggles

Large, soft body fits over most prescription spectacles. Features a wide, chemical-resistant neoprene headstrap. Indirect ventilation system allows air to flow freely through the goggle body. Clear polycarbonate lens with scratch-resistant uvextreme® coating protects against 99% of harmful UV rays up to 385nm. Meets ANSI Z87.1-2003 and CSA Z94.3-1999 standards.

CAT. NO. 17253



uvex® stealth™ Chemical Splash Goggles

Low-profile, wraparound lens design with indirect ventilation to minimize fogging. Combines polypropylene frame and elastomer inner flange for superior splash protection. With quick-adjust headband clips for easy, secure fitting. Clear polycarbonate lens with scratch-resistant uvextreme® coating protects against 99% of harmful UV rays up to 385nm. Meets ANSI Z87.1-2003 and CSA Z94.3-1999 standards.

CAT. NO. 189992312



Fisherbrand® Full-Size Faceshield

High-quality, optically clear, distortion-free 7mil polyester lens treated with antifog and antistatic coating. Stretch strap includes a latex-free, hypoallergenic foam band. Pack of 25.

CAT. NO. 19460102



Fisherbrand® Polycarbonate Faceshield

Large, molded polycarbonate window offers outstanding splash protection. 8½" high (21.6cm), ANSI-approved faceshield provides 99.9% UV protection up to 380nm. Meets ANSI Z87.1-1989 standards. A ledge on the headgear prevents fluid from splashing down inside the window. Pinlock headgear can be sterilized and disinfected; window can be steam autoclaved.

CAT. NO. 189994542



Sperian® Protecto-Shield® Faceshield

Sturdy browguard is constructed of a durable, heat-resistant thermoplastic polymer. Brim overhang keeps fluids from dripping down inside window. Propionate window offers protection against impact, sparks, and splashes; injection molded to eliminate distortion. Meets ANSI Z87.1-1989 standards. **Note:** Basic eye protection must be worn under faceshields to protect from flying particles and hazardous splashes.

CAT. NO. 189994459 (Headgear only)
CAT. NO. 189992991 (Window)

FALL PROTECTION



Miller™ Titan™ Full-Body Harness

Fully adjustable harness constructed of tough polyester webbing features mating buckles on the chest and shoulder straps, a sliding back D-ring with a flexible D-ring pad, and tongue buckle leg straps. Sub-pelvic strap reduces pressure on shoulders. Includes trilingual labeling and instructions. Meets applicable OSHA, ANSI, and CSA standards. Universal size.

CAT. NO. 19041473



MSA® FP Pullover® Harness

Uniquely designed to contain torso, keep wearer in an upright position, and distribute fall arrest forces to the sub-pelvic area in the event of a fall. Single-point shoulder-strap adjuster allows user to fit comfortably for daylong wear. Features back D-ring for attaching fall-arrest equipment; tongue buckles on leg straps; two hip D-rings; chest D-ring. Meets or exceeds applicable OSHA, ANSI, and CSA standards.

CAT. NO. 189994718



Miller® Revolution™ Fall Harness

Advances harness functionality with features developed to meet key, user-identified needs. Rotary PivotLink™ connection point provides greater comfort in bending. Semi-rigid back shield minimizes minor impacts and positions D-ring.

CAT. NO. 191304080



Miller™ Titan™ Shock-Absorbing Lanyard

Constructed of lightweight, durable, tubular polyester webbing. Features a woven inner shock-absorbing core which smoothly expands to 3½' (1m) to reduce fall arrest forces; outer jacket acts as a backup web lanyard. Single-leg configuration. Meets all applicable OSHA, ANSI, and CSA standards.

CAT. NO. 19041509

FALL PROTECTION (CONTINUED)



Miller™ Manyard® II Shock-Absorbing Lanyard

Designed with integral shock-absorbing inner core surrounded by an extra strong, heavy-duty jacket that serves as a backup web lanyard. Has two zinc-plated locking snap hooks, both with ¾" (1.9cm) throat openings. Warning flag shows when lanyard is unfit for service due to previous fall. Meets OSHA, ANSI, and CSA requirements.

CAT. NO. 19002989

FIRE FIGHTING PRODUCTS



Scott® AV-2000® Facepiece

Ideal for firefighting, industrial, and Haz Mat service. Cone-shaped lens provides widest possible field of vision and helps reduce carbon dioxide buildup. Easy-to-remove nosecup with mesh head harness for quick donning. Dual high-performance voicemitters for clear communication in all directions. Set-and-forget temple straps for excellent facepiece-to-face seal. NIOSH approved. Universal Kevlar® Head Harness with Comfort Seal. Black.

CAT. NO. 19038297



Scott® AV-3000® Facepiece

Improves on the popular AV-2000 facepiece. Full facepiece assembly fits persons of varying facial shapes and sizes with minimal interference to downward and peripheral vision. With appropriate adapter, the AV-3000 can also be used as an air-purifying respirator with 42CFR84 cartridges. Kevlar® head harness.

CAT. NO. 19148614 (Medium)

CAT. NO. 19148615 (Large)



Streamlight® Orange Fire Vulcan® Flashlight

Extremely powerful (65,000 candlepower) fire service flashlight features two ultra bright blue tail light LEDs that let your partners see you when they are following you in a smoke-filled room. Rechargeable with cushioned grip handle and a high-impact, waterproof, ABS thermoplastic housing.

CAT. NO. 19121807



PGI King Cobra™ Classic™ Firefighting Hood

Provide double layer coverage of the neck, upper chest, and top of shoulder blades. Contoured shoulder blades reduce bunching of bib. UL classified to meet NFPA 1971, 2000 Edition requirements. Nomex/Lenzing FR Blend.

CAT. NO. 19500373



Morning Pride Ventilating Hood

Features double-layer head and bib construction with an elastic-reinforced face opening. Helps to reduce firefighter heat stress by trapping less heat than traditional hood styles. Open-weave mesh ventilating panel in crown allows maximum heat release from top of head. Bib extends down the front and back about 8" and down the sides approximately 6". PBI/rayon.

CAT. NO. 19815033

FIRE FIGHTING PRODUCTS (CONTINUED)



Morning Pride Structural Firefighting Gloves

Elkskin gauntlets offer insulation and flexibility. With self-extinguishing fabric (SEF) fleece lining and breathable, heat-resistant CrossTech® moisture barrier. Nomex® 24/4 thread stitching and Arashield® "Wick-Guard". Meet requirements of NFPA 1971, 2000 Edition. Sold by the pair.

CAT. NO. 19814971 (Medium)

CAT. NO. 19814972 (Large)

CAT. NO. 19814975 (X-Large)



American Firewear Kangaroo Leather Super Gloves

Features top grain kangaroo leather on glove back for easy flex and exceptional durability. Thermal architecture traps air for thermal protection without traditional bulk. Gauntlet-style. Sold per pair.

CAT. NOS. 19171020C through -E (M to XL)

FIRST AID



North™ Bulk First Aid Kits

Designed for large facilities, kits are ideal for manufacturing settings where a wide variety of first aid items are required. Contain economical bulk supplies that can be readily accessed when needed. Latex free and weatherproof. Housed in plastic case. ANSI Z308.1-2003 compliant.

CAT. NO. 191302483 (10 person)

CAT. NO. 191302485 (25 person)

CAT. NO. 191302487 (50 person)



North™ Unitized First Aid Kits

Sturdy, durable and waterproof kits hold color-coded cartons containing individual sealed unit dose applications. Plastic cases have carrying handles for portability and are supplied with brackets for wall mounting. ANSI Z308.1-2003 compliant.

CAT. NO. 191302491 (10 person)

CAT. NO. 191302493 (16 person)

CAT. NO. 191302495 (24 person)



Gatorade® Thirst Quencher Drinks

Instant Powder Pack. Flavor: Orange, Size/Yield: 21 oz./2½ gal. Case of 32 packets.

CAT. NO. 1781614

FLASHLIGHTS



Pelican® Super SabreLite® Flashlights

Suitable for potentially explosive and other hazardous environments. Watertight to 500 feet. 12,000 candlepower. Unbreakable ABS plastic-resin body and Lexan® lens. Yellow.

CAT. NO. 17985407C



Pelican® MityLite™ Magnum Flashlight

Focused xenon Laser Spot® beam is 600% brighter than ordinary flashlights. Watertight to 500 feet. Made of unbreakable, chemical-resistant Xenoy® resin. FM, CSA, and MSHA approved nonincendive. Black.

CAT. NO. 19034486

FOOT PROTECTION



Onguard PVC Boot and Shoe Covers

Made of 0.2mm thick PVC plastic uppers heat welded to 0.5mm thick embossed PVC soles. Boots are 15" high (38cm) with elastic top. Waterproof. Yellow.

CAT. NOS. 17986300 through -02
(Sizes *Medium to X-Large*)



Onguard Economy Kneeboots

PVC plastic over-the-sock boots for wet or muddy conditions only—not for chemical or electrical resistance. Cleated outsoles, replaceable insoles, reinforced shanks, and kick-off lugs. Steel toe meets ANSI STD Z41 PT91 I/75 C/75 and CSA STD Z195 M92 Grade 1 for impact and compression. Height: 16" (41cm). Black.

CAT. NOS. 17987401A through -G (Sizes *6 to 12*)



Onguard Polyblend™ Work Boots

Injection-molded, one-piece boots offer high chemical resistance. Steel toe meets or exceeds ANSI Z41 PT91 1-75, C-75, and CSA Z195 M92 Grade 1. Features include steel shanks; removable, washable cushion insoles; pull-up and kick-off lugs; and molded pant stays to keep pants tucked inside the boot shaft. Height: 16" (41cm). Black with grey cleated nonslip outsoles.

CAT. NOS. 17986326 through -33 (Sizes *6 to 13*)



Tingley Hazproof™ Work Boots

Specially formulated compound resists chemical permeation and provides flame retardation. Boots meet and surpass protective footwear requirements for vapor (21 chemicals) for hazardous chemical emergencies. Steel midsole meets or exceeds CSA Z195-M for sole and heel puncture resistance. Height: 11" (28cm).

CAT. NOS. 19034461B through -H (Sizes *7 to 13*)



Onguard Hazmax® Boots

Ideal for emergency response teams, Haz Mat technicians, environmental specialists, and site remediation workers. Choose from steel-toe kneeboots or over-the-shoe style. NOTE: Not for fire protection. Sold by the pair. (Order knee boots two sizes larger if to be worn over Haz Mat suit sock boots.)

CAT. NOS. 17985403B through -L (16" steel-toe kneeboots, Sizes *6 to 15*)

CAT. NOS. 17985404A through -J (17" over-the-shoe strappers, Sizes *6 to 15*)



Onguard Hazmax® EZ-Fit Boots

Designed for easy donning and doffing while wearing chemical protective suit. Large kick-off lug for easy removal. Steel toe, steel shank, and steel midsole for complete protection. 11" high. Sold by the pair.

CAT. NOS. 191304542 through -45 (Men's sizes *S to XL*)



Onguard Latex Overboot

Recommended for spill cleanup and municipalities work. Dipped boot and shoe cover features ribbed and textured sole. 100% waterproof. Height, 12" (30cm). Yellow.

CAT. NO. 19054801 (*L*)
CAT. NO. 19051497 (*XL*)
CAT. NO. 19051495 (*XXL*)

HAND PROTECTION



Safety Choice™ Cotton Inspection Gloves

100% cotton lisle gloves are ideal for general inspection work or as liners for unlined liquid-proof gloves. Lightweight and ambidextrous with two-piece construction. Available in men's and women's styles and in 14" long (36cm) reversible, unhemmed style. Pack of 12 pairs.

CAT. NO. 19013540 (*Women's Medium*)
CAT. NO. 19013538 (*Men's Large, 8"*)
CAT. NO. 19059613 (*Men's Large, 14"*)



Fisherbrand® Cotton Canvas Gloves

Multipurpose fabric gloves used for light protection in many general applications. 100% natural cotton fabric with knitwrist, clute cut. Regular grade, men's size. Weight, 8 oz. (227g). Color: natural. Pack of 12 pairs.

CAT. NO. 19013522



Fisherbrand® Dotted Canvas Gloves

Black PVC dotted palm improves grip. Used for light protection in oil drilling, warehousing, farming and automotive applications. Knitwrist. Weight, 8 oz. (227g). Pack of 12 pairs.

CAT. NO. 19049583



Fisherbrand® Synthetic Blend String Knit Gloves

Used in warehousing, parts handling, assembly, and food processing; also popular as glove liners. Reversible string knit gloves are made from a cotton/polyester blend for durability and comfort. Knit pattern allows breathability with less hand fatigue. Standard weight, men's size. Pack of 12 pairs.

CAT. NO. 19050145



Fisherbrand® PVC Dotted String Knit Gloves

White cotton string knit gloves with PVC plastic dots on both sides. Ideal for protecting hands from dirt and abrasion. Seamless style provides comfort and reversibility. Standard weight. Launderable. Pack of 12 pairs.

CAT. NO. 1138753 (*Men's size*)
CAT. NO. 1138752 (*Women's size*)



Safety Choice™ Economy Leather Palm Gloves

Split-cowhide leather work gloves feature gunn-cut style with wing thumb, shirred elastic back, and leather pull patch. Leather covers index finger, thumb, knuckle, and fingertips. Denim fabric-backed gloves feature reinforced palm and safety cuff. Striped fabric-backed gloves feature starched safety cuff. Men's size. Pack of 12 pairs.

CAT. NO. 19046134 (*Denim fabric back*)
CAT. NO. 19816875 (*Striped fabric back*)



Fisherbrand® Standard Leather Palm Gloves

Ideal for use in dirty applications where the glove is almost disposable. Made with traditional striped fabric back and cuff with split cowhide palm. Gunn-cut. Wing thumb with shirred elastic back; with leather pull patch, leather covering over palm, thumb, index finger, and fingertips. Pack of 12 pairs.

CAT. NOS. 19013465 and -66 (*Safety cuff, S-L*)
CAT. NO. 19816871 (*Safety cuff, XL*)
CAT. NO. 19053924 (*Gauntlet cuff, L*)

HAND PROTECTION (CONTINUED)



Fisherbrand® Select Leather Palm Gloves

Made from select-grade shoulder split cowhide for use in construction, metal-work, general maintenance, warehousing, and other medium- to light-duty applications. Leather covers palm, index finger, and thumb. Gunn-cut construction provides longer life. Large. Rubberized cuff. Pack of 12 pairs.

CAT. NO. 19013469 (2" safety cuff)
CAT. NO. 19013471 (4" gauntlet cuff)



PIP® Bronze Series Double-Leather Palm Gloves

Gunn-cut gloves feature leather at palm, thumb, and forefinger. Constructed from B-grade shoulder split cowhide leather. With plasticized gauntlet cuff and green- and pink-stripped fabric back. Pack of 12 pairs.

CAT. NO. 191201558



Fisherbrand® Leather Driver's Gloves

Provide abrasion resistance and excellent dexterity. Intermediate grade, top-grain leather. Straight thumb and elastic back. Ideal for construction, machine operation, utility work, farming, roping, and other general applications. Launderable. Pack of 12 pairs.

CAT. NO. 19013357 (L)
CAT. NO. 19013359 (XL)



Fisherbrand® Pigskin Driver's Gloves

Return to original pliability even after being soaked in water. Gunn-cut style with straight thumb and elastic wrist. Suited for construction, machine operation, utility work, and many general applications. Unlined. Pack of 12 pairs.

CAT. NO. 19043020 (L)
CAT. NO. 19043042 (XL)



Fisherbrand® Natural Rubber Latex-Coated Palm Gloves

Ideal for assembly, construction, inspection, and general material handling. Seamless cotton-polyester liner with crinkle-textured palm/fingertip coating provides excellent wet and dry grip while repelling moisture from skin. Ergonomic shape reduces hand fatigue. Machine washable. Pack of 12 pairs.

CAT. NO. 19816907 through -09 (M to XL)



TOWA® PowerGrab™ Latex-Coated Palm Textured Finish Gloves

Breathable seamless, gray cotton-polyester blend string knit liner features blue latex rubber coating on palm and fingertips, and a fully coated thumb. Crinkle-textured finish for superior grip in wet and dry applications. Ergonomic shape for reduced hand fatigue. Machine washable. Pack of 12 pairs.

CAT. NO. 19816906 (M)
CAT. NO. 19816905 (L)
CAT. NO. 19120161 (XL)



Sperian® Atlas Fit™ Rubber-Coated Gloves

Medium-weight, seamless knit cotton/polyester blend shell is palm coated with natural rubber. Textured, rubber-coated palm resists abrasion, inhibits liquid penetration and provides a safe, sure grip; also coated at wear areas of the fingertips and thumb crotch. Ergonomic design reduces hand fatigue. Pack of 12 pairs.

CAT. NO. 189994410B and -C (L to XL)



Safety Choice™ Powder-Free Latex Exam Gloves

Provide outstanding barrier protection, comfort and tactile sensitivity. Beaded cuffs for tear resistance and ease of donning. Odorless. Ambidextrous. Color, natural. Single-use. Packaged 100 gloves per pack.

CAT. NOS. 19058801A through -D (XS to L)



Safety Choice™ Powdered Latex Exam Gloves

Made from high-grade natural rubber latex and lightly powdered with USP grade modified corn starch for easier donning. Beaded cuffs. Ambidextrous. Color, natural. Single-use. Packaged 100 gloves per pack.

CAT. NOS. 19058800A through -D (XS to L)



Fisherbrand® Powdered and Powder-Free Latex Exam Gloves

Provide a watertight barrier for protection from infectious materials. Made of surgical quality natural rubber latex. Puncture- and tear-resistant. Textured fingers. Powdered gloves are lightly dusted with USP absorbable dusting powder. Powder-free gloves are suitable for ISO Class 6 (formerly Class 1000) or above cleanrooms. Length, 9½" (24cm). Thickness, 6mil. Ambidextrous. White. Nonsterile. Pack of 100.


CAT. NOS. 113944A through -D (Powdered, XS-L)
CAT. NOS. 113945A through -D (Powder-free, XS-L)



Cardinal Health Positive Touch® Powder-Free Latex Exam Gloves

Made of natural rubber latex for durability and comfort. Double coated for easier donning. Fit securely while providing tactile sensitivity. Textured. Ambidextrous. Beaded cuff. Nominal Length: 9½" (24cm). Finger Thickness: 7.8mil. Pack of 100.

CAT. NOS. 191302608A through -E (XS to XL)

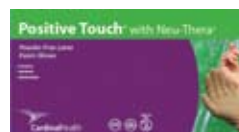

Cardinal Health Positive Touch® Latex Gloves with Neu-Thera™

Clinically proven to protect hands from moisture loss. Neu-Thera™ formulation includes ingredients found in physician-recommended hand lotions. Fully bisque exterior for excellent grip. Powder-free, nonsterile, and ambidextrous. Nominal Length: 10" (25.4cm). Fingertip Thickness: 6.3mil. X-Small to Large, 100/Pk.; X-Large, 90/Pk.

CAT. NOS. 191301899A through -E (XS to XL)

WARNING: Some of these products contain natural rubber latex, a component of which may cause allergic reaction in some users. Use only as directed and in accordance with manufacturer instructions and warnings. Please consult your institution's policies regarding use of these products.



Microflex® Diamond Grip™ Powder-Free Latex Exam Gloves

Perfect choice for procedures in labs that require greater tactile sensitivity for instrument manipulation. Textured surface. Beaded cuff. Ambidextrous. Nonsterile. Length: 9¾". Fingertip Thickness: 9.1mil. Pack of 100.

CAT. NOS. 1146267A through -E (XS to XL)



Microflex® Evolution One® Powder-Free Latex Exam Gloves

Unique polymer coating for easy donning and doffing. Ideal for handling potentially hazardous materials. Excellent tactile sensitivity and high tensile strength. Textured. Beaded cuffs. Ambidextrous. Nonsterile. Length: 10". Thickness: 8.7mil. Pack of 100.

CAT. NOS. 1146268A through -E (XS to XL)



Microflex® CE5 System® Latex Ambidextrous Gloves

Low surface particulates, ionic extractables, and nonvolatile residues. Multiclass cleanroom compatibility. Length: 12". Fingertip Thickness: 7.9mil. Pack of 100.

CAT. NOS. 191202503A through -D (S to XL)



Kimberly-Clark® KleenGuard® Powder-Free Blue Nitrile Gloves

Blue nitrile material provides an added degree of durability compared to latex, while textured fingertips provide enhanced grip and dexterity. Ambidextrous, powder-free, beaded cuff. Blue synthetic nitrile rubber, 5.9mil at fingertip, 4.7mil at palm. Length, 9½" (24cm). 100 gloves per dispenser box.

CAT. NOS. 191203050A through -D (XS to L)



Safety Choice™ Powder-Free Nitrile Exam Gloves

Powder-free, odorless, and 100% latex-free. Textured fingers offer exceptional wet and dry gripping. Beaded cuff resists tears and eases donning. Ambidextrous. Color, blue. Single-use. 100 gloves per pack.

CAT. NOS. 19170010A through -D (S to XL)



Fisherbrand® Powder-Free Nitrile Exam Gloves

Odor-free gloves have a beaded cuff for easier donning. Softer formulation offers exceptional fit and feel. Meets ASTM F1671. Latex-free. Nonsterile. Ambidextrous. Textured surface. Length: 9½" (24cm). Thickness at fingertip: 6mil. Pack of 100.

CAT. NOS. 191301597A through -E (XS to XL)



Cardinal Health Esteem® Stretchy Nitrile Gloves

Combine comfort and a precision fit with excellent puncture resistance. With beaded cuffs to prevent tearing and textured fingertips for a firm, nonslip grip. Powder-free, ambidextrous and nonsterile. Nominal Length: 9½" (24cm). Fingertip Thickness: 6.6mil. X-Small to Large, 100/Pk.; X-Large, 90/Pk.

CAT. NOS. 191202942A through -E (XS to XL)



Cardinal Health Esteem® Nitrile Gloves with Neu-Thera™

Neu-Thera™ formulation protects, restores, and moisturizes hands. Puncture-resistant. With beaded cuffs and textured fingertips. Powder-free, ambidextrous and nonsterile. Nominal Length: 10¼" (26cm). Fingertip Thickness: 5.9mil. X-Small to Large, 100/Pk.; X-Large and XX-Large, 90/Pk.

CAT. NOS. 19165500A through -F (XS to XXL)



Microflex® UltraSense® Powder-Free Nitrile Exam Gloves

Patented ultra soft nitrile provides the fit and feel of latex. Textured fingers provide outstanding grip. Nonsterile. Ambidextrous. Length: 9½" (24cm). Fingertip thickness: 4.7mil. Pack of 100.

CAT. NOS. 19167032A through -E (XS to XL)



Safety Choice™ Natural Rubber Latex Gloves

Chlorinated gloves feature rolled, beaded cuffs to prevent tears. Provide resistance to acids, alkalis, alcohols, salts, ketones, and animal fats. Flock-lined style provides increased comfort and ease of donning. Recessed diamond texturing provides better gripping in slippery applications. Large size. Yellow. Pack of 12 pairs.

CAT. NO. 19816829



PIP® Assurance™ Heavyweight Flock-Lined Latex Gloves

Made of heavyweight chlorinated latex. Resist acids, alkalis, alcohols, salts, ketones and animal fats. Rolled bead cuff. Cotton flock lining. Length: 12" (30.5cm). Thickness: 21mil. Diamond pattern finish. Large. Pack of 12 pairs.

CAT. NO. 19161856



Fisherbrand® Unsupported Nitrile Gloves

Excellent grip with wet and dry applications. Acceptable for use in both food and pharmaceutical applications. Embossed raised-diamond pattern on the palm and fingers. Pack of 12 pairs.

CAT. NOS. 19161866 through -70 (S to XXL)



Ansell® Sol-Vex® Nitrile Gloves

Protect against abrasions, cuts, snags, and punctures. Will not weaken or swell in many solvents, caustics, and animal fats. Full cut for easy donning and doffing. Curved finger design and contoured palm help reduce fatigue. Flock lined. 13" long (33cm); 15mil thick. Pack of 12 pairs.

CAT. NO. 11391139A through -F (Sizes 6 to 11)



Best Glove® N-DEX® Nitrile Laboratory and Industrial Gloves

Lightly powdered nitrile with a nontalc vegetable starch. Ambidextrous. Single-use. Length: 9.5" (24cm). 4mil thick. Pack of 100.

CAT. NOS. 1139519A through -D (S to XL)

WARNING: Some of these products contain natural rubber latex, a component of which may cause allergic reaction in some users. Use only as directed and in accordance with manufacturer instructions and warnings. Please consult your institution's policies regarding use of these products.

HAND PROTECTION (CONTINUED)



Safety Choice™ Single-Dip PVC Gloves

Interlock lined for great dexterity. Ideal for petrochemicals and refining; handling oils, acids, caustics and alcohols. Semi-rough finish provides enhanced wet grip and improved cut-resistance. Color, black. Pack of 12 pairs. Length: 14" (35.6cm)

CAT. NO. 19816881



Stockhausen Kresto® Cleanser

Gentle low-solvent formulation features Astopon® natural walnut shell powder scrubber and Eucornol® (for extra skin protection) with a pleasant fragrance and pH balance. Concentrated formula available in a 2L Softbottle®. Completely biodegradable. Will not clog drains or pipes.

CAT. NO. 19048399

HEAD PROTECTION



MSA® V-Gard® Protective Cap

High-density polyethylene helmet is lightweight and well balanced for all-day wearing comfort. Meets or exceeds all applicable requirements of ANSI Z89.1-1997 for Type I helmets, Class G and E. Standard (6½ to 8) size.

CAT. NO. 19054727 (White, Staz-On suspension)

CAT. NO. 19043675 (White, Fas-Trac suspension)



MSA® V-Gard® Caps and Hats Replacement Suspensions

Replacement suspension for Fas-Trac suspension on V-Gard caps and hats.

CAT. NO. 19058255 (Standard size)




MSA® Custom Terri-Band Sweatband

Excellent fit and comfort with all MSA helmets. Provides excellent absorption. Easily washable; no metal parts.

CAT. NO. 189993513

HEARING PROTECTION

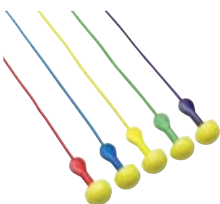

E-A-R® Express® Pod Plugs

Patented insertion grip eliminates need to touch pod surface; unique design creates secure, gentle seal. Slow-recovery foam compresses easily, without wrinkles, and slides gently into ear canal, expanding slowly to seal completely without excess pressure. NRR: 25dB. Corded plugs come with grips of assorted colors. 100 pairs per pack.

CAT. NO. 18763



E-A-R® Classic® Ear Plugs

Easy to use: simply compress the soft foam plug, insert in ear canal, and let plug expand. Attenuation tested in accordance with ANSI S3.19-1974. NRR: 29dB. 200 pairs per pillow pack.

CAT. NO. 17380

HEARING PROTECTION (CONTINUED)



E-A-R® UltraFit® Ear Plugs

Corded plugs feature triple-flange design and soft polymer construction for safe use and nonirritating protection. No sizing required. Clean by simply washing plugs with mild detergent and folding back flanges for quick drying. 100 pairs per pack. Noise Reduction Rating (NRR): 21dB.

CAT. NO. 173805



Fisherbrand® DeciDamp2® Ear Plugs

Disposable plugs made from nontoxic, nonirritating PVC foam expand to fit ear contours, ensuring maximum comfort and positive fit while attenuating noise levels. One size fits all. Uncorded plugs come 1 pair per cellophane pouch, 200 pairs per dispenser pack. Attenuation tested in accordance with ANSI S3.19-1974. Noise Reduction Rating (NRR): 29dB.

CAT. NO. 19003127



Howard Leight® Max® Ear Plugs

Smooth, soil-resistant outer skin provides maximum comfort and hygiene; keeps foreign material from penetrating the surface while being rolled prior to insertion. Preshaped and tapered for easy insertion. Soft foam material expands to provide a self-adjusting, custom fit. Attenuation tested in accordance with ANSI S3.19-1974. Noise Reduction Rating (NRR): 33dB.

CAT. NO. 19021229 (Uncorded, 200 Pr./Pk.)

CAT. NO. 19021230 (Corded, 100 Pr./Pk.)



Howard Leight® Max-Lite™ Ear Plugs

Preshaped low-pressure foam plugs are ideal for workers with small ear canals; virtually eliminate pressure on ear canal. Tapered with winged ends for easy insertion/removal. Smooth, soil-resistant outer skin for optimal comfort and hygiene. Plugs are available uncorded or with yellow poly cord. Attenuation tested in accordance with ANSI S3.19-1974. Noise Reduction Rating (NRR): 30dB.

CAT. NO. 19045765 (Uncorded, 200 Pr./Pk.)

CAT. NO. 19064895 (Corded, 100 Pr./Pk.)



Fisherbrand® Excel® Ear Plugs

One size fits all—including those with small, hard-to-fit ear canals. Preshaped, tapered plugs roll to extremely small size and expand slowly for comfortable fit. Integrated flexing action adjusts to head and jaw movements. Smooth, soil-resistant surface won't irritate ear canal. 100 pair per pack. Attenuation tested in accordance with ANSI S3.19-1974. Uncorded. Noise Reduction Rating (NRR): 30dB.

CAT. NO. 19067524



Bilson® Cap-Mounted Dielectric Ear Muffs

Dielectric cap-mount earmuffs. For use with a wide range of hard hats. Earcups snap in place during use and swing back when not in use.

CAT. NO. 191304581



Howard Leight® LM-77 Ear Muff

Over-the-head muff features lightweight, antishock dielectric construction and soft foam cushions for comfortable long-term use. Compact design for easy storage. Cushions can be easily cleaned with soap and water. Noise Reduction Rating (NRR): 28dB.

CAT. NO. 19087412

HEARING PROTECTION (CONTINUED)



Howard Leight® Quiet™ 24 Plus Ear Muff

Slim, lightweight hearing protector features highly visible, dielectric cups. Adjustable crown strap provides secure fit in three positions: over-the-head, under-the-chin, and behind-the-neck. Soft vinyl cushions are removable for easy cleaning. Contoured one-piece headband follows shape of the head to minimize pressure. Noise Reduction Rating (NRR): 25dB. Weighs only 6 oz. (170g).

CAT. NO. 19813222

LOCKOUT / TAGOUT



Brady® Toolbox Lockout Kit with Components

Carry from workstation to workstation everything needed for a safe, compliant environment. Toolbox measures 17W x 5D x 4½"H. With removable tray. Individual padlocks, hasps and tags available separately.

CAT. NO. 189991326



Brady® Gate Valve Lockout

Durable, nonadherent plastic resists chemicals, heat, and cold. Stainless-steel hinge design for added strength and security. Knockout feature accommodates OS&Y, or "rising stem," gate valves. For 1 to 2½" dia. valve handle.

CAT. NO. 17987275A (For 1 to 2½" dia. valve handle)
CAT. NO. 17987275B (For 2½" to 5 dia. valve handle)



Brady® Cable Lockout for Gate Valves

Flexible cable lock conveniently locks out large gate valves of all sizes and multiple gate valves. Easier and lighter to carry and install than lockouts made of chain. One size fits all. Includes: 6 ft. (1.8m) cable.

CAT. NO. 189991338



Master Lock® Safety Lockout Hasp

Allows up to six workers to lock out a single energy source. Plated to resist rust. Accepts padlocks up to ¾" shackle diameter. Dual locking levers provide extra pry resistance. Hasp size: 1½" jaw diameter.

CAT. NO. 19813524



Master Lock® Padlock

Laminated steel body. Case-hardened steel shackle. Four-pin cylinder. Padlock has 1½"W lock body with ⅜" dia. shackle.

CAT. NO. 189991347A

RESPIRATORY PROTECTION



3M™ General Industrial Filtering Facepiece Respirators (N95)

For use in bagging, drilling, grinding, machining, sanding, sawing, processing of minerals, and grain handling. Recommended for use up to 10X the PEL or the appropriate OSHA standard. Feature Advanced Electret Media for easier, cooler breathing, and adjustable nose clip and straps for comfortable fit. Available with optional exhalation valve.

CAT. NO. 18999473 (Without valve, 20/Pk.)
CAT. NO. 19002713 (With valve, 10/Pk.)

RESPIRATORY PROTECTION (CONTINUED)



3M™ 8000 Series N95 Respirators

An economical solution for light duty or short-duration applications. Two-strap design with single point attachment helps provide a secure fit. Adjustable nose clip reduces eyewear fogging and helps ensure a better seal and fit. Patented filter media with advanced electrostatically charged microfibers helps make breathing easier and cooler. Meet NIOSH 42 CFR 84 requirements. Pack of 30.

CAT. NO. 19065671



3M™ 9200 Series N95 Respirators

Offer comfortable fit that conforms to a wide range of face sizes. Made with advanced electrostatically charged microfibers to make breathing easier and cooler. Available with CoolFlow™ one-way exhalation valve for easy exhalation and cool, dry comfort. Three-panel construction resists collapse and provides better visibility. Pack of 10.

CAT. NOS. 19041429 (with valve), 19041427 (without valve)



MSA® Advantage® 200LS Respirator

AnthroCurve™ Sealing Surface instantly conforms to each wearer's unique facial characteristics for unmatched fit and comfort. Patented Multiflex™ System delivers exceptional stability, so the respirator will not collapse during wear. For use with all Advantage cartridges and filters (sold separately). NIOSH approved. Single neck strap.

CAT. NOS. 189993897 through -99 (S to L)



3M™ 6000 Series Half-Facepiece Reusable Respirator

Combines features of both reusable and disposable respirators. Lightweight facepiece, adjustable headstraps, and cradle suspension provide excellent user comfort. Low profile offers excellent visibility. Backswept cartridges (sold separately) balance better on the face while their large surface area ensures low breathing resistance. Supplied with storage bag. NIOSH approved.

CAT. NOS. 179869A through -C (S to L)



3M™ 7500 Series Half-Mask Respirator

Reusable silicone mask features a unique adjustment design that helps reduce tension and pressure points on the face. CoolFlow™ exhalation valve lowers breathing resistance. Dual-mode head harness allows use in traditional or drop-down modes. Yoke won't get hot like metal yokes—excellent for welding applications. Accommodates 3M Series 2000, 5000, 6000, and 7093 cartridges and filters.

CAT. NOS. 19096898 through -900 (S to L)



North™ 7700 Series Silicone Half-Mask Respirator

Lightweight, silicone rubber facepiece provides a comfortable, secure seal and won't harden with age. Offers same secure fit and durability as full-facepiece models. "One-piece" cradle suspension system prevents loss or misassembly of individual straps. Direct cartridge-to-facepiece connections provide a sure seal without extra gaskets that increase spare parts inventory.

CAT. NOS. 176201 through -03 (S to L)

RESPIRATORY PROTECTION (CONTINUED)



MSA® Advantage® 3200 Twin-Port Respirator

Features lower breathing resistance than traditional full-facepiece respirators for increased airflow and enhanced user productivity. Optically correct, wraparound lens provides a wide, distortion-free field of vision; exceeds the performance requirements of ANSI Z87.1. Soft, pliable silicone facemask and rubber head harness don quickly; pre-adjustable straps ensure consistent fit and tight seal.

CAT. NOS. 19041906A through -C (S to L)



3M™ Full-Facepiece 6000 Series Reusable Respirator

Requires limited maintenance time, reducing need for expensive repair programs. Lightweight, well-balanced respirator offers long-wearing comfort. No retainers or extra parts needed to attach filters or cartridges. Soft, lightweight facepiece material and easy-to-use headstraps provide maximum comfort. Large lens with scratch-resistant hard-coat provides a wide field of vision.

CAT. NOS. 189994555 through -57 (S to L)



3M™ 7800S Full-Facepiece Respirator

Soft, pliable silicone facepiece features double-flap seal to ensure fit/protection. Extra-large inhalation and exhalation valves and a standard nosecup promote easy breathing without fogging. Large faceshield with scratch-resistant polycarbonate lens provides extra visibility. With six adjustable straps to distribute weight, and a high-quality rust-free speaking diaphragm.

CAT. NO. 17663B through -D (S to L)



3M™ Cartridges and Cartridge/Filter Combinations

Provide respiratory protection for contaminants up to 10X the permissible exposure limit (PEL) with half-facepiece respirators or 50X the PEL (when quantitatively fit tested) with full-facepiece respirators or according to specific OSHA standards or applicable government regulations, whichever is lower. P100 filters are 99.97% efficient against solid and liquid aerosols, including oils. Not for use in atmospheres that are unknown or immediately dangerous to life or health (IDLH).

CAT. NO. 1798611A (Organic Vapor)

CAT. NO. 1798611C (Organic Vapor/Acid Gas)

CAT. NO. 189994548 (Organic Vapor/P100, 2/Pk.)

CAT. NO. 189994550 (Organic Vapor/Acid Gas/P100, 2/Pk.)

CAT. NO. 189994567 (Multigas/P100, 2/Pk.)

For a brief list of contaminants included in each cartridge category, visit www.fishersafety.com [keyword: 3M cartridges]. **Note:** OSHA regulations require that gas-proof goggles be worn with half-facepiece respirators when used against formaldehyde.

3M™ N95 Particulate Filter

N95 filter is NIOSH approved for environments containing certain non-oil-based particles. For use with 3M Cartridges 6000 Series and Filter Retainer 501. Pack of 10.

CAT. NO. 189994547

3M™ P100 Particulate Filter

P100 filter is NIOSH approved for environments containing certain oil and non-oil-based particles. For use with 3M Cartridges 6000 Series with Adapter 502 or Facepieces 7000 Series with bayonet filter holders. Pack of two.

CAT. NO. 189992573

3M™ Filter Retainer 501

Used to hold 3M particulate filters 5N11 (189994547) in place on top of 3M Cartridges 6000 Series. Pack of 20.

CAT. NO. 17673B



MSA® Advantage® Cartridges and Filters

Particulate, chemical and combination cartridges are lightweight for comfort but designed for maximum protection. Bayonet-style mounting allows easy installation; cartridges lock into place with a single twist. Meet NIOSH 42CFR84. Packaged two cartridges per pack.


CAT. NO. 189993978 (P100 Particulate Filter)

CAT. NO. 189993919 (Organic Vapor/Acid Gas)

CAT. NO. 189993807 (Organic Vapor/Acid Gas/P100)

CAT. NO. 19003230 (Multigas/P100)

For a brief list of contaminants included in each cartridge category, visit www.fishersafety.com [keyword: MSA Advantage cartridges].

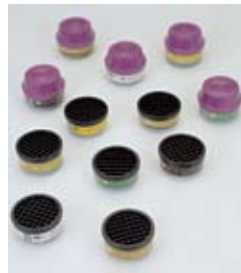

North™ Low-Profile Cartridges and Cartridge/P100 Filter Combinations

P100 filter/cartridge combinations fit easily under other facegear; lightweight design improves comfort. Unique seal check feature on the P100 pancake filter makes it easy to verify facepiece-to-face seal. All North cartridges, filters, and cartridge/filter combinations are NIOSH certified to 42CFR84 standards when used with North respirator facepieces and are available in packs of two.

CAT. NO. 19003298B (Organic Vapor)

CAT. NO. 19003263 (P100 Particulate Filter)

CAT. NO. 19003300B (Organic Vapor/Acid Gas)

CAT. NO. 1762214 (Organic Vapor/P100)

CAT. NO. 19003263H (Organic Vapor/Acid Gas/P100)

CAT. NO. 19003313B (Multigas/P100)

For a brief list of contaminants included in each cartridge category, visit www.fishersafety.com [keyword: North P100].



Allegro® Respirator Cleaning Pads

Designed especially for use on rubber respirator facepieces and other personal safety equipment. Use alcohol-free pads made with benzalkonium chloride to clean even the most sensitive rubber facepieces. Size: 5 x 8" (13 x 20cm). Pack of 100.

CAT. NO. 19049883 (70% isopropyl alcohol)

CAT. NO. 19038507 (Alcohol-free)

RESPIRATORY PROTECTION (CONTINUED)



3M™ Respirator Cleaning Wipes

Alcohol-free wipes are designed to effectively clean elastomeric facepiece respirators. Will not damage facepiece materials. Size: 8 x 10" (20 x 25cm). Individually packaged towelettes in dispenser box, 100/Pk.

CAT. NO. 179876



Allegro® Reusable Respirator Bag

Durable, reusable transparent polypropylene with zipper closure. Large enough for full-facepiece or half-mask respirators. Cleaning instructions printed on bag.

CAT. NO. 19041317



3M™ Qualitative Fit-Test Kit, Bitter

Contains everything necessary to fit test any particulate respirator or gas/vapor respirator with a particulate prefilter. Use for fit-testing on NIOSH-approved respirators, in accordance with OSHA 42CFR84 1910.134. Kit includes: sensitivity solution (bitter), fit-test solution (bitter), testing hood and collar, two nebulizers, and a detailed, multilingual instruction booklet.

CAT. NO. 19002720

SPILL CONTROL



Justrite® Type I Steel Safety Can

Heavy-duty steel cans with double seal seams. Premium steel construction with double seams to protect against leaks. Leak-tight, self-closing spout with built-in positive pressure relief automatically vents pressure between 3 and 5psig. UL and ULC listed. FM approved. Meet OSHA and NFPA requirements. 5 gal. (19L).

CAT. NO. 17176C



Fisherbrand® Spill Response Drum Kits

Six-gallon polyethylene drum contains five socks, two wipes, two bags with ties, and two shaker cartons of sorbent. Total sorbing capacity: approx. seven gal. (26.5L). 20-gal. drum contains six socks, six pillows, four wipes, three bags with ties, and two shaker cartons. Total sorbing capacity: approx. 18 gal. (68.1L). Both drums carry DOT approval for transportation of hazardous materials. Safety locks and PVC O-rings assure tight seal.

CAT. NO. 17985128 (6 gal.)

CAT. NO. 17206A (20 gal.)



Fisherbrand® Chemical Spill Cabinet

Kit contains six pillows, five absorbent wipes, two disposal bags with ties, two shaker cartons of sorbent, pan with broom and one Personal Protection Pack, which contains one pair of chemical-resistant nitrile gloves, one pair booties, apron, goggles, and two shipping labels. Cabinet measures 16¼H x 13¾W x 5½"L (41.3 x 34.9 x 14cm).

CAT. NO. 19034968

SPILL CONTROL (CONTINUED)



Fisherbrand® Oil-Selective Sorbent Pads

For cleaning spills of flammable material. Water-repellent, nonwoven polypropylene sorbents sorb up to 25 times their weight in petrochemical-based liquids. 19L x 17"W (48.3 x 43.2cm).

CAT. NO. 17215B (Capacity: 39 gal., 100/Pk.)

CAT. NO. 17215C (Capacity: 78 gal., 200/Pk.)

Fisherbrand® Oil-Selective Sorbent Booms

Polypropylene sorbents absorb oil and solvent spills on water. Booms float on the surface to selectively remove hydrocarbons while containing the oil spill. Hardware is included to link booms for larger coverage. 8" x 10'. 90 gal. sorbing capacity. Pack of 4.

CAT. NO. 172152A



Fisherbrand® Universal Sorbents

Tough, lint-free pads absorb up to 20 times their weight. Useful for leaks and drips. Material folds easily to create multi-layer barrier. Pillow and sock casings are made from a chemical-resistant polyester blend that enhances absorbency (absorbs up to 14 times its weight); use for spill containment and control.

CAT. NO. 19034157 (Pillows, 11 x 17", Cs. of 12)

CAT. NO. 172062B (Socks, 3' x 46", Cs. of 12)

CAT. NO. 19034155 (Pads, 17 x 19", Pk. of 100)



NPS Spillyter® Chemical Classifiers

Test strips allow immediate color-coded identification of spilled chemicals. Pack of 50 strips.

CAT. NO. 19057467

PHONE ORDERS 24/7

- *Fisher Safety Customer Service, from anywhere in the USA: 1-800-772-6733*
- *For Federal Government sales: 1-800-226-4732*
- *For State/Municipal Government sales: 1-888-263-5319*
- *Fisher Scientific Research Customer Service, from anywhere in the USA: 1-800-766-7000*
- *In Puerto Rico: 1-787-738-4231*

FAX ORDERS

- *Fisher Safety Customer Service, from USA: 1-800-772-7702*
- *In Puerto Rico: 1-787-738-4600*

EDI

Real-time transaction processing. Use your own part numbers and units of measure by cross-referencing to the Fisher Scientific equivalents.

MAIL

Send your order to the nearest Fisher Scientific Customer Service Center serving your area. Include remittance (certified check, money order or credit card account number); a Customer Service Representative can help you estimate shipping charges and tax. You do not need a pre-existing Fisher Scientific account.

ON SITE

Through your Fisher Safety Representative, who visits your lab, plant or job site and helps you decide on the combination of safety products and services that best fulfill your requirements.

ORDERS ACCEPTED 24/7

Be sure to include catalog number, brief product description, and quantity.



Fisher Safety

Ordering from Fisher Safety

Online @ www.fishersafety.com

EASY TO USE

Just a few clicks put you in touch with thousands of products and convenient links to regulatory agencies.

CREATE ORDERS

Simplify your ordering process with RapidOrder, hot lists, templates and more.

OBTAIN APPROVALS

Standardize approval rules, hierarchies and paths for the swiftest requisition approvals possible.

TRACK ORDERS

Real-time status of requisitions and orders is available in seconds.

MANAGE SPENDING

Create rules and restrictions that automatically control every order placed by your business.

MONITOR GRANT FUNDS

Our fund tracking feature ensures that government requirements for tracking grant funds and spending on specific product categories are met.





The GET IT Program

Questions and Answers

WHAT IS THE GET IT PROGRAM?

GET IT is a program that provides quick access to the most commonly used safety items—quality products ready for delivery.

HOW DOES THE GET IT PROGRAM BENEFIT FISHER SAFETY CUSTOMERS?

Fisher Safety realizes that sometimes the need is Right Now! This program will allow you to get our most popular products quickly. Our goal is to help you reduce your administrative burden, reduce downtime created by backorders, and streamline your purchasing process.

WILL THE GET IT PROGRAM APPLY TO ANY QUANTITY?

GET IT is meant to cover “normal” order levels. For a single order that is unusually large, lead time will be reviewed. Please call Fisher Safety Customer Service for help determining the lead time for any large orders.

DO I HAVE TO NOTE ANYTHING ON THE PO OR ASK FOR THE GET IT PROGRAM?

NO! There is no up charge for this program and no special ordering requirements.

WHAT IF THE PO IS MARKED “SHIP COMPLETE”?

If Fisher Safety receives an order where only one shipment is requested (ship complete at one time), the product with the longest lead time drives the ship date for the order. If all the items on the “ship complete” order are part of the GET IT Program, then GET IT lead times will apply.

WHAT IF A SPECIFIC SHIP DATE IS NEEDED?

The GET IT Program is designed to provide customers with a focused product offering available for quick shipment. Of course, if a future ship date is requested for any reason, Fisher Safety will accommodate the later requirement.